



**Cleaner, Fresher Air in 24 Hours
New Advanced Environmental Air Treatment System**

For Mini Split Units



NOTE: Please take time to read the attached assembly instructions.
All instructions and precautions should be adhered to while
operating this system.

Manufactured in the USA by RGF Environmental Group, Inc.

**WARRANTY REQUEST FORM
(INCOMPLETE FORMS WILL NOT BE PROCESSED!)**

RETURN AUTHORIZATION NO. _____

CONTRACTOR:
NAME _____

ADDRESS _____

CITY _____ STATE _____ ZIP CODE _____

CONTACT _____ PHONE _____ FAX _____

WHOLESALER:

NAME _____

ADDRESS _____

CITY _____ STATE _____ ZIP CODE _____

CONTACT _____ PHONE _____ FAX _____

EMAIL ADDRESS _____

UNIT: MODEL # _____ SERIAL # _____

INVOICE # _____ DISTRIBUTOR P.O. #: _____

DATE OF SALE: _____ OVER THE COUNTER EXCHANGE? YES NO

IF YES, SERIAL # _____

ITEM(S) SUBMITTED FOR WARRANTY:

1) _____

2) _____

REASON(S) FOR RETURN:

(FOR MANUFACTURER USE ONLY)

DATE ITEM(S) RECEIVED: _____

RECEIVED BY: _____

REPLACEMENT UNIT OR PART SENT

COMMENTS: _____

**NOTE: THIS COMPLETED FORM MUST
ACCOMPANY ALL RETURNED ITEMS
WITHIN 30 DAYS FOR PROCESSING
SHIP TO YOUR DISTRIBUTOR**

The Mini Split PHI Unit by RGF

The **PHI** line of products are designed to help eliminate sick building syndrome risks by reducing odors, air pollutants, bacteria and cold and virus causing germs through the patented Photohydroionization® (PHI) process. The Mini Split PHI Cell easily mounts onto existing Mini Split air conditioning, heating and heat pump units. When the Mini Split system is in operation, the PHI Cell uses an Advanced Oxidation Process to reduce airborne contaminants.

Typical Installation

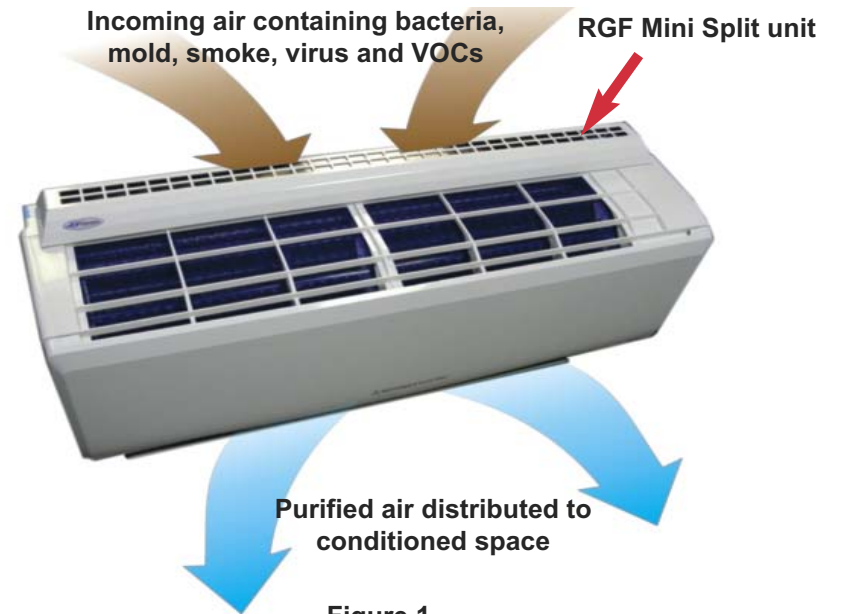


Figure 1

PHI Cell Features

Ballast

Proprietary UVX Long life lamp



Figure 2

PTAC PHI Unit INSTALLATION INSTRUCTIONS

CAUTION: NEVER LOOK DIRECTLY AT AN ILLUMINATED PHI CELL. THIS DEVICE PRODUCES GERMICIDAL UV LIGHT AND WILL CAUSE DAMAGE TO EYES

Your kit contains the following:

- Mini Split unit with high voltage 230V ballast and 3' leads
- Instruction manual

NOTE: BE SURE MINI SPLIT UNIT IS UNPLUGGED AND POWER IS DISCONNECTED BEFORE PROCEEDING WITH INSTALLATION.

INSTALLATION & ELECTRICAL INSTRUCTIONS:


1. Remove plastic tapes from velcro tabs and position Mini Split unit over intake of indoor air unit. Press firmly to attach adhesive tab to unit. (Refer to Fig.3)




Figure 3

Additional RGF Products

In Duct Microbe, VOC and Allergen Solutions

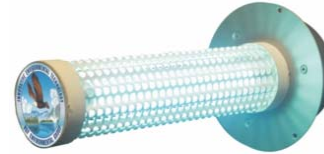

RGF's Guardian Air PHI is designed to eliminate sick building syndrome risks by reducing odors, air pollutants, VOCs (chemical odors), smoke, mold, bacteria and viruses*. The HVAC-PHI Cells are easily mounted into air conditioning and heating systems air ducts where most sick building problems start. When the HVAC system is in operation the HVAC-PHI Cell creates an Advanced Oxidation Process consisting of: Hydro-peroxides, super oxide ions and hydroxide ions. All are friendly oxidizers that revert back to oxygen and hydrogen after the oxidation of the pollutant.

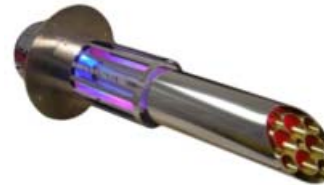

Guardian Air REME HVAC Cell REME or Reflective Electro Magnetic Energy utilizes an electromagnetic energy cell to create ionized hydro peroxides™, a friendly oxidizer plasma made from oxygen and humidity. This air purifying plasma is propelled into the HVAC duct or plenum by a silent plasma propulsion module that has no moving parts, yet propels the plasma at 2 cfm. This provides for fan or blowerless operation on a 24-hour basis. The purifying plasma will be propelled through the ducts whether the fan or blower is on or not. 24 volt installation lets the REME run 24/7 without wiring to the fan/blower circuit. The oxidizer plasma transfers the electrical charge (positively and negatively charged ions) from the hydro peroxides to suspended (airborne) particles in the occupied space causing them to bond together. This makes them too heavy to float enabling them to be drawn back to the filter. This is an excellent solution for individuals that suffer from dust and dander allergies.

FIVE YEAR LIMITED WARRANTY WITH TWO YEAR EXCHANGE POLICY

This warranty supersedes and replaces any warranty statements made orally by the Sales Person, Distributor, or Dealer, or contained in the written instructions or other brochures or informational documents related to this product.

Manufacturer warrants the new Guardian Air by RGF® unit to be free from defects in material and workmanship under normal use and service when operated and maintained in accordance with manufacturer's instructions for a period of five years (sixty months) from the original date of purchase (excludes PHI or REME cell). The PHI or REME cell included with the original unit is warranted to be free from defects in material and workmanship for a period of 2 years (24 months) from original purchase date. (For international orders twelve (12) months parts only. Shipping not included.)

For the two years (24 months), the manufacturer offers an immediate over the counter exchange for a demonstrated defective unit. The company making this exchange and requesting credit for said unit is obligated to verify that the unit or cell is in fact defective. After the initial 2 year period (up to five years from original date of purchase), this warranty is limited to repairing or replacing the ballast found to its satisfaction to be so defective, excluding the PHI or REME cell included with original purchase. Hereafter, the unit will need to be returned to the manufacturer under a Returned Materials Authorization (RMA) for review and or repair (if found defective). This warranty does not cover parts damaged by decomposition from chemical action or wear caused by abrasive materials, nor does it cover damage resulting from misuse, abuse, or any other than its intended use, accident, neglect, or from improper operation, maintenance, installation, modification, or adjustments.

THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.

To obtain warranty service and return authorization number, contact your supplier.

Model number: MINI SPLIT-HVAC-PHI-230

Replacement cell part number: PHIC-5GA

Include a copy of your Bill of Sale, Invoice or Receipt of Purchase, with an explanation of the problem or defect.

Hg- LAMP CONTAINS MERCURY Manage in accord with disposal laws.
See: www.lamprecycle.org



Figure 4

2. The power wire leads can be connected to the power source through the back panel of the indoor unit (Refer to figure 4)
3. Remove the cover from indoor unit. Connect L1 (black wire) to S1 terminal. Connect L2 (white wire) to S2 terminal. (Refer to figure 5)



Figure 5

LIMITED WARRANTY COMMON QUESTIONS

Cell Replacement

Disconnect power before replacing the cell.

1. Pull Mini Split unit off of indoor unit.
2. Press the locking springs clips with thumbs to remove cell bracket. (Fig.6)



Figure 6

3. Disconnect cell from bracket and 4 pin connector. (Fig.7)



Figure 7

4. Install new cell. Reverse steps 1-3

How long is the warranty?

- 2 years for the cell from initial start up
- 5 years for the ballast from initial start up

How do I contact the Manufacturer about my warranty, a question or complaint?

- Your local Sales Representative may answer a question or complaint.
- If they cannot answer the warranty question or complaint, you can contact your local supplier and request the warranty department.

Are there any parts not covered by this warranty (that the manufacturer will not repair or replace)?

•Yes. Parts damaged by decomposition from chemical action, humidity, moisture, or wear caused by abrasive materials. It does not cover damage resulting from misuse, abuse, or any other use other than its intended use. This warranty does not cover accident, neglect, or from improper operation, maintenance, installation, modification or adjustments.

•Parts not made by Manufacturer. However your supplier will process the claim with the other manufacturer.

What do I do in the event the equipment is damaged in shipping?

•Immediately upon receipt of the unit, you as the purchaser should inspect the unit and test it to make sure it is operational.

•If there is visible damage to the equipment:

1. Notify the carrier shipping office immediately and write on the Bill of Lading the visible damage or part(s), which are broken or missing.
 2. Call your local supplier immediately to specify the damage
 3. Your supplier should refund the unit at the suppliers cost.
- Thoroughly read and understand all Operating Instructions, Warnings and Precautions before commencing application.